



EWS 103417 A

.....
EN WASHING MACHINE

.....
USER MANUAL



Electrolux. Thinking of you.

Share more of our thinking at www.electrolux.com

CONTENTS

Safety information	2	Hints and tips	8
Environment concerns	3	Before first use	9
Technical information	4	Daily use	9
Product description	4	Care and cleaning	12
Control panel	5	Troubleshooting	15
Programmes	6	Installation	17

Subject to change without notice.



SAFETY INFORMATION

Before the installation and use, read this manual carefully:

- For your safety and the safety of your property
- To help the environment
- For the correct operation of the appliance.

Always keep these instructions with the appliance also if you move or give it to a different person.

The manufacturer is not responsible if an incorrect installation and use causes damage.

CHILDREN AND VULNERABLE PERSON SAFETY

- Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety. Do not let children play with the appliance.
- Keep all packaging away from children. There is the risk of suffocation or injury.
- Keep all detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- Before you close the appliance door, make sure that children and pets are not into the drum.
- If the appliance has a child safety device, we recommend to activate it.

GENERAL SAFETY

- Do not use the appliance for professional use. The appliance is only for domestic use.
- Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance. Risk of explosion or fire.
- Obey the safety instructions on the detergent packaging to prevent burns to eyes, mouth and throat.
- Make sure that you remove all metal objects from the laundry. Hard and sharp material can cause damage to the appliance.
- Do not touch the glass of the door while a programme operates. The glass can be hot (only for front-loading appliances).

CARE AND CLEANING

- Deactivate the appliance and disconnect the mains plug from the mains socket.
- Do not use the appliance without the filters. Make sure that the installation of the filters is correct. An incorrect installation causes water leakages.

INSTALLATION

- The appliance is heavy, be careful when you move it.
- Do not transport your appliance without the transit bolts, you can damage internal components and cause leakages or malfunctions.

- Do not install and connect a damaged appliance.
- Make sure to remove all packaging and transport bolts.
- Make sure that the mains plug is disconnected from the mains socket during installation.
- Only a qualified person must do the electrical installation, the plumbing and the installation of the appliance. This to prevent the risks of structural damage or injury.
- Do not install or use the appliance where the temperature is less than 0 °C.
- When you install the appliance on a carpet floor, make sure that there is air circulation between the appliance and the carpet. Adjust the feet to have the necessary space between the appliance and the carpet.

Water connection

- Do not connect the appliance with old hoses already used. Only use new hoses.
- Make sure not to cause damage to the water hoses.
- Do not connect the appliance to new pipes or pipes not used for a long time. Let the water flow for some minutes, then connect the inlet hose.
- The first time you use the appliance, make sure that the water hoses and the couplings do not have leakages.

ENVIRONMENT CONCERNS

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Electrical connection

- Make sure that the appliance is earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply.
- Always use a correctly installed shock-proof socket.
- Do not use multiple plugs and extension cables. There is a risk of fire.
- Do not replace or change the mains cable. Contact the service centre.
- Make sure not to cause damage to the mains plug and cable.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

DISCARD THE APPLIANCE

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.
3. Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation (only for front-loading appliances).

PACKAGING MATERIALS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it.

ECOLOGICAL HINTS

To help the environment, use less water and energy, obey these instructions:



- Set a programme without the prewash phase to wash laundry with normal soil.
- Always start a washing programme with the maximum load of laundry.
- If necessary, use a stain remover when you set a programme with a low temperature.
- To use the correct quantity of the detergent, check the water hardness of your domestic system

TECHNICAL INFORMATION

Dimensions	Width / Height / Depth	600 / 850 / 330 mm
Electrical connection:	Voltage	220-240 V
	Overall power	2100 W
	Fuse	10 A
	Frequency	50 Hz
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture		IPX4
Water supply pressure	Minimum	0,5 bar (0,05 MPa)
	Maximum	10 bar (1 MPa)
Water supply ¹⁾		Cold water
Maximum load	Cotton	3.5 kg
Spin speed	Maximum	1000 rpm


1) Connect the water inlet hose to a water tap with a 3/4" thread.

PRODUCT DESCRIPTION

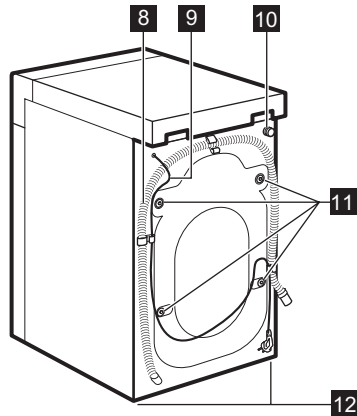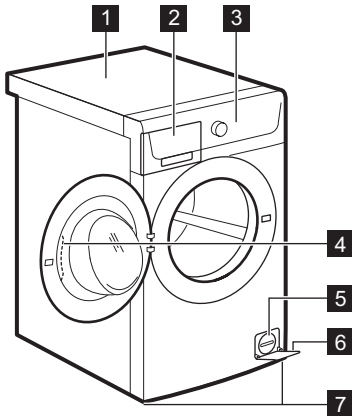

- 1 Worktop
- 2 Detergent dispenser
- 3 Control panel
- 4 Door handle
- 5 Drain pump
- 6 Rating plate
- 7 Feet for the appliance level

ACCESSORIES

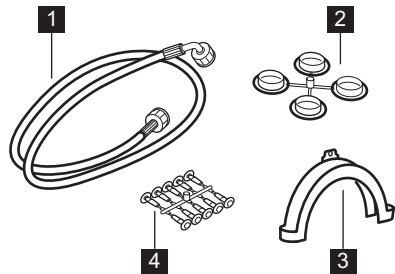

- 1 Inlet hose**
To connect the appliance to the cold water tap.

4 Small plastic caps

3 Plastic hose guide

CONTROL PANEL



2 Display

3 Start button ▶

4 Easy iron button $\Rightarrow$

5 Extra rinse button 

6 Intensive button

7 Prewash button | |

8 Spin button 

9 Delay Start button

PROGRAMME KNOB 1

Turn this knob to set a programme.

DISPLAY 2

- | | |
|----------|---|
| B | <ul style="list-style-type: none"> • The default spin speed of the programme. • 'No Spin' (00). |
| C | <ul style="list-style-type: none"> • The display symbols.
The symbols appear on the display when the related function is set. |
| D | <ul style="list-style-type: none"> • The programme time • Alarm codes
If the appliance has a malfunction, the display shows alarm codes. Refer to 'Troubleshooting' chapter. • End
It comes on when the programme is completed. |

- | | |
|----------|---|
| B | <ul style="list-style-type: none"> • The default spin speed of the programme. • 'No Spin' (00). |
| C | <ul style="list-style-type: none"> • The display symbols.
The symbols appear on the display when the related function is set. |
| D | <ul style="list-style-type: none"> • The programme time • Alarm codes
If the appliance has a malfunction, the display shows alarm codes. Refer to 'Troubleshooting' chapter. • End
It comes on when the programme is completed. |

- | | |
|----------|---|
| B | <ul style="list-style-type: none"> • The default spin speed of the programme. • 'No Spin' (00). |
| C | <ul style="list-style-type: none"> • The display symbols.
The symbols appear on the display when the related function is set. |
| D | <ul style="list-style-type: none"> • The programme time • Alarm codes
If the appliance has a malfunction, the display shows alarm codes. Refer to 'Troubleshooting' chapter. • End
It comes on when the programme is completed. |

START BUTTON 3

Press this button to start a programme.

EASY IRON BUTTON 4

Press this button to prevent the creases in the fabrics. When you press this button, the appliance decrease the intensity of the washing phase and spin speed. Automatically, the spin speed is set to 500 rpm. Set this function to iron the laundry easily and quickly.

EXTRA RINSE BUTTON 5

Press this button to add rinsing phases to a programme. Use this function for persons allergic to detergents and in areas where the water is soft.

INTENSIVE BUTTON 6

Press this button to increase the intensity of the washing phase. Use this function for laundry with heavy soil to remove. The time of the washing phase is extended and the detergent can remove more easily the hard stains from the laundry.

PREWASH BUTTON 7

Press this button to add a prewash phase at 40° C before the washing programme. We recommend that you use this function when you have laundry with a high level of soil.

 The set of this function increases the programme duration.

SPIN BUTTON 8

Press this button to:

- Decrease the maximum speed of the spin phase when you set a programme.

 The display shows only the spin speeds available with the set programme.

- Deactivate the spin phase.



The spin phase is off.

DELAY START BUTTON 9

Press this button to delay the start of a programme from 1 hour to 16 hours. Press this button again and again to set the correct delay start. The symbol **h** flashes until the start of the washing programme while the indicator of the Start is off. When the programme starts the indicator of the Start comes on.

 30 minutes after the set of the delay start, the light display comes off while the symbols of the functions set stay on. Press one of the buttons or turn the programme knob to activate again the light display.

PROGRAMMES

Programme Temperature	Type of load and soil Weight of load	Programme phases	Possible functions
 Хлопок 90° — 75° C	White cotton with heavy soil. This programmes add also the phase of hygiene to the laundry. max. 3.5 kg	Wash Rinses Spin phase at the maximum speed	    
 Хлопок ¹⁾ 60° C	White and fast coloured cotton with normal soil. max. 3.5 kg	Wash Rinses Spin phase at the maximum speed	    

Programme Temperature	Type of load and soil Weight of load	Programme phases	Possible functions
 +  Хлопок ЭКО 40° C	White and coloured cotton with normal or light soil. max. 3.5 kg	Wash Rinses Spin phase at the maximum speed	    
 Хлопок Цветное 30° C	White and coloured cotton with light soil. max. 3.5 kg	Wash Rinses Spin phase at the maximum speed	    
 Синтетика 60° C	Synthetic or mixed fabric items with normal level of soil max. 1.7 kg	Wash Rinses Spin phase at 800 rpm	    
 Синтетика  Sport items 40° C	Synthetic or mixed fabric items with normal or light level of soil. It is possible to wash casual, sport or quilted items. Set this pro- gramme and the easy iron func- tion not to iron the laundry. max. 1.7 kg	Wash Rinses Spin phase at 800 rpm	    
 Синтетика  Mixed fabrics 30° C	Cotton, synthetic or mixed fabric items with light level of soil or worn once. max. 1.7 kg	Wash Rinses Spin phase at 800 rpm	    
 Деликатные ткани 30° – 40° C	Delicate fabrics as viscose, poly- ester items with normal or light soil. max. 1.7 kg	Wash Rinses Spin phase at 500 rpm	 
 Шерсть 40° – Cold	Machine washable wool. Hand washable wool and delicate fab- rics with «hand washing» care symbol. max. 0.8 kg	Wash Rinses Spin phase at 800 rpm	
 Handwash - Silk 30° C	Hand washable delicate fabrics with «hand washing» care symbol. max. 0.8 kg	Wash Rinses Spin phase at 800 rpm	
 Quick wash 35° C	Quick wash of cotton, synthetic, delicate or mixed fabric items with light level of soil or worn once. max. 1.7 kg	Wash Rinses Spin phase at 800 rpm	

Programme Temperature	Type of load and soil Weight of load	Programme phases	Possible functions
 Daily 40° C	White and coloured cotton with daily level of soil. max. 2.5 kg	Wash Rinses Spin phase at the maximum speed	   
 Стирка без нагрева	White and coloured cotton with light soil. max. 3.5 kg	Wash Rinses Spin phase at the maximum speed	   
 Полоскание	All fabrics. max. 3.5 kg	Rinse with additive Spin phase at the maximum speed	   
 Отжим	Spin phase for hand washed laun- dry.	Drainage of the water Spin phase at the maximum speed	 
 To cancel the programme that it operates or to deactivate the appliance.			

1) Refer to this programme for the energy label values with a maximum load of cotton at the maximum spin speed. It agrees with the EEC 92/75 standards.

CONSUMPTION VALUES

Programme ¹⁾	Energy consumption (KWh)	Water consumption (litre)
White Cottons 90° C	1.50	43
Cottons 60° C ²⁾	0.56	37
Cotton economy 40° C	0.41	38
Cotton 30° C	0.26	27
Synthetics 40° C	0.38	38
Delicates 40° C	0.42	41
Wool/ Handwash 40° C	0.25	44
 The consumption information shown in this chart is indicative. It can vary depending on the quantity and the type of laundry, on the temperature of the water supply and on the ambient temperature.		

1) For the programme time refer to the display .

2) This is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards, with a maximum load of 3.5 kg of cottons at the maximum spin speed.

HINTS AND TIPS

THE LAUNDRY LOAD

- Divide the laundry in: white, coloured, synthetics, delicates and wool.
- Obey the washing instructions that are on the laundry care labels.
- Do not wash together white and coloured items.
- Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times.
- Button up pillowcases, close zippers, hooks and poppers. Tie up belts.
- Empty the pockets and unfold the items.
- Turn inside out multilayered fabrics, wool and items with painted illustrations.
- Remove hard stains.
- Wash with a special detergent heavy soil stains.
- Be careful with the curtains. Remove the hooks or put the curtains in a washing bag or pillowcase.

- Do not wash in the appliance :
 - Laundry without hems or with cuts
 - Underwired bras.
 - Use a washing bag to wash small items.
- A very small load can cause balance problems with the spin phase. If this occurs, adjust manually the items in the tub and start the spin phase again.
- Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil.
- If you use liquid detergents, do not set the prewash phase.
- If your appliance has not the detergent dispenser with the flap device, add the liquid detergents with a dosing ball.

STUBBORN STAINS

For some stains, water and detergent is not sufficient.

We recommend that you remove these stains before you put the items in the appliance.

Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric.

DETERGENTS AND ADDITIVES

- Only use detergents and additives specially made for washing machines.
- Do not mix different types of detergents.
- To help the environment, do not use more than the correct quantity of detergent.
- Obey the instructions that you find on the on packaging of these products.

WATER HARDNESS

If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water hardness is soft it is not necessary to use a water softener.

To know the water hardness in your area, contact your local water authority.

Obey the instructions that you find on the packaging of the products.

Equivalent scales measure the water hardness:

- German degrees (°dH).
- French degrees (°TH).
- mmol/l (millimol for each litre - international unit for the hardness of water).
- Clarke degrees.

Water hardness table

Level	Type	°dH	Water hardness		
			°T.H.	mmol/l	Clarke
1	soft	0-7	0-15	0-1.5	0-9
2	medium	8-14	16-25	1.6-2.5	10-16
3	hard	15-21	26-37	2.6-3.7	17-25
4	very hard	> 21	> 37	>3.7	>25

BEFORE FIRST USE

1. To activate the drain system, put 2 litre of water in the main wash compartment of the detergent dispenser.
2. Put a small quantity of detergent in the main wash compartment of the detergent dispenser. Set and start a programme for cotton at the highest temperature without laundry. This removes all possible dirt from the drum and the tub.

DAILY USE

1. Open the water tap.
2. Connect the mains plug to the mains socket.

3. Put the laundry in the appliance.
4. Use the correct quantity of detergent and additives.
5. Set and start the correct programme for the type of laundry and soil.


LOADING THE LAUNDRY

1. Open the appliance door.
2. Put the laundry in the drum, one item at a time. Shake the items before you put them in the appliance. Make sure not to put too much laundry in the drum. Make sure that no laundry stays between the seal and the door. There is a risk of water leakage or damage to the laundry.
3. Close the door.



FILLING THE DETERGENT AND ADDITIVES

Caution! Use only specified detergents for washing machine.

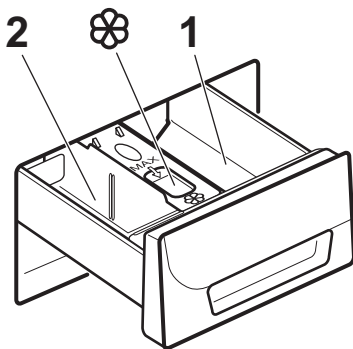

1

The detergent compartment for the prewash phase or for the soak programme. Add the detergent for prewash and soak before the start of the programme.

2

The detergent compartment for the washing phase. If you use a liquid detergent, put it immediately before you start the programme.




Liquid additives compartment (fabric conditioner, starch). Put the product in the compartment before you start the programme.




Always obey the instructions that you find on the packaging of the detergent products.

Using the liquid detergent

1. Pull out the detergent dispenser until it stops.
2. Pull out the detergent divider from its position (A).

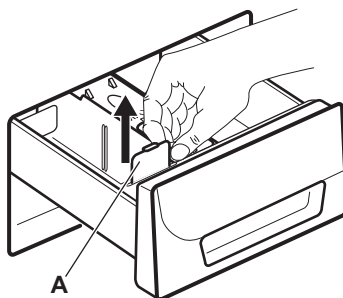

- Put it into the special guides in the middle of the compartment for the washing phase.

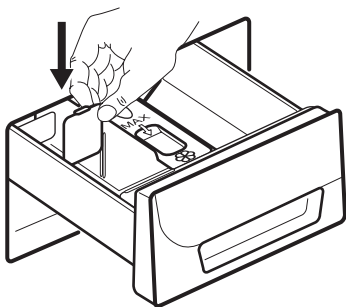

i When you use the detergent divider:

- Do not use gelatinous or thick liquid detergents.
 - Do not put more liquid detergent than the edge of the detergent divider.
 - Do not set the prewash phase.
 - Do not set the delay start function, if it is available.
- Measure out the detergent and the fabric conditioner.
 - Carefully close the detergent dispenser.

SETTING AND STARTING A PROGRAMME

- Turn the programme knob and set the washing programme.
- The Start button indicator is off.
- Set the available functions.
When you press the relevant button, the indicator of the set function comes on.
- Press the Start button to start the programme until the button indicator is on.

CANCEL A PROGRAMME

- Turn the programme knob to  to cancel the programme and to deactivate the appliance.
- Turn the programme knob again to activate the appliance. Now, you can set a new washing programme.

i The appliance does not drain the water.

CHANGE A FUNCTION

You can change only the delay and spin function before they operate.
Press the related button to set the new value.

SET THE DELAY START

- Press the delay start button again and again until the display shows the number hours.
- Press the start button, the appliance starts the countdown of the delay start. The symbol **h** flashes in the display and the start button indicator is off.
When the countdown is completed, the programme starts automatically and the start button indicator comes on.

i You can cancel or change the set of the delay start also when the appliance starts the countdown.

CANCEL THE DELAY START

Press the delay start button again and again until the display shows **0**.
The programme starts and the start button indicator comes on.

OPEN THE DOOR

While a programme operates, the appliance door is locked.

To open the appliance door:

- Turn the programme knob to  to deactivate the appliance.
- Wait for some minutes before to open the appliance door.
- Close the appliance door.
- Set the programme again.

i If the temperature and level of the water in the drum are too high, you cannot open the door.

To open the appliance door:

- Do the steps 1 and 2 again.
- Wait for some minutes.
- Make sure that no water is in the drum.

AT THE END OF THE PROGRAMME

- The appliance stops automatically.
- The display shows the **End** symbols.
- Turn the programme knob to  to deactivate the appliance.

- Remove the laundry from the appliance. Make sure that the drum is empty.
- Keep the door ajar, to prevent mildew and odours.
- Close the water tap.

The washing programme is completed, but there is water in the drum:

- The Rinse Hold function or a programme that stops with water in the drum is set.
- The door stays locked and the start button indicator flashes.
- You must drain the water before to open the door.

To drain the water:

1. If necessary, decrease the spin speed.
2. Press the start button. The appliance drain the water and spin.
3. When the programme is completed:
 - The display shows the **End** symbols.
 - You can open the door.

CARE AND CLEANING

Warning!

Disconnect the appliance from the mains supply before you clean it.

EXTERNAL CLEANING

Clean the appliance only with soap and warm water. Fully dry all the surfaces.

 **Caution!** Do not use alcohol, solvents or chemical products.

DESCALING

The water we use contains limescale. If it becomes necessary, use a water softener to remove limescales.

Use a special product made for washing machines. Obey the instructions that you find on the packaging of the manufacturer. Do this separately from the laundry wash.

MAINTENANCE WASH

With the low temperature programmes it is possible that some detergent stays in the drum. Make regularly a maintenance wash. To do this:

- Empty the laundry from the drum.
- Set the hottest cotton wash programme
- Use a correct quantity of powder detergent with biological properties.

4. Turn the programme knob to  to deactivate the appliance.

STAND BY

After some minutes the end of the washing programme, if you do not deactivate the appliance, the energy saving status activates.

The energy saving status decreases the energy consumption when the appliance is on standby.

- The brightness of the display goes off.
- The display shows the symbol **End**.
- All indicators go off.

Press one of the buttons to deactivate the energy saving status.

After each wash, keep the door open for a while to prevent mould and to let unpleasant smells go out.

DRUM

Regularly examine the drum to prevent limescale and rust particles.


Only use special products to remove rust particles from the drum.

To do this:

- Clean the drum with special product for stainless steel.
- Start a short programme for cotton at the maximum temperature with a small quantity of detergent.

DOOR SEAL


Regularly examine the seal and remove all objects from the inner part.

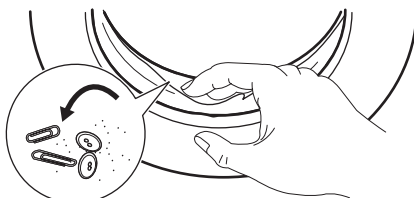


DETERGENT DISPENSER

To clean the dispenser:


1. Press the lever and pull the dispenser out.

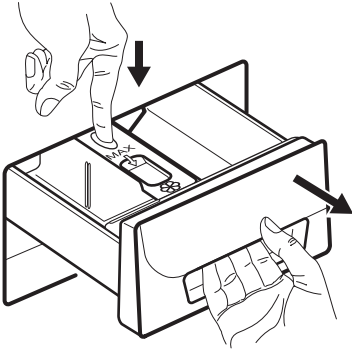

2. Remove the top part of the liquid additive compartment.

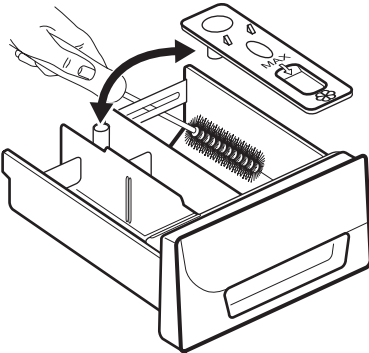

3. Clean all the parts with water.
4. Clean the dispenser recess with a brush.

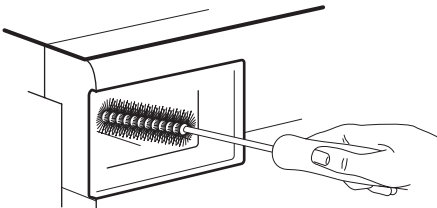

5. Put back the dispenser in the recess.

DRAIN PUMP

- i** Regularly examine the drain pump and make sure that it is clean.


Clean the pump if:

- The appliance does not drain the water.
- The drum cannot turn.
- The appliance makes an unusual noise because of the blockage of the drain pump.


Warning!

1. Disconnect the mains plug from the mains socket.
2. Do not remove the filter while the appliance operates. Do not clean the drain pump if the water in the appliance is hot. The water must be cold before you clean the drain pump.

1. Open the pump door.

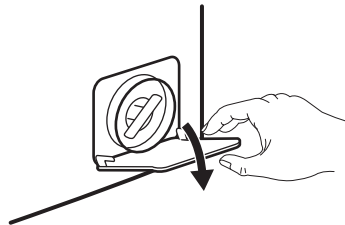


2. Put a container below the recess of the drain pump to collect the water that flows out.
3. Unscrew the filter to let the water flow out.

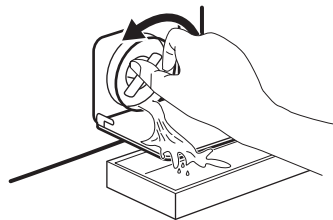


4. When the container is full of water, screw the filter again and empty the container. Do steps 3 and 4 again and again until no more water flows out from the drain pump.


5. Unscrew the filter and remove it.

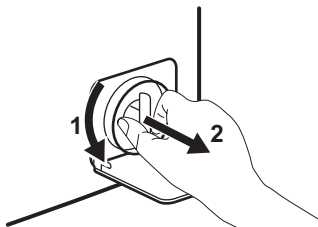


6. Remove fluff and objects from the pump.

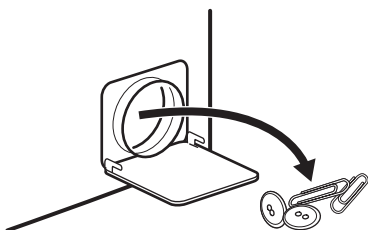

7. Make sure that the impeller of the pump can turn. If this does not occur, contact the service centre.

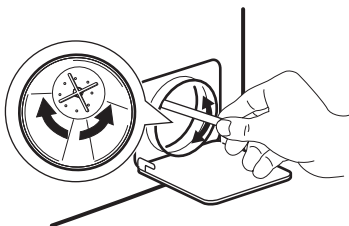

8. Clean the filter under the water tap and put it back in the pump.
9. Make sure that you tighten correctly the filter to prevent leakages.

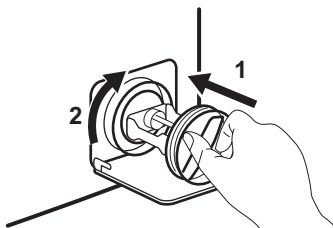

10. Close the drain pump door.

CLEAN THE INLET VALVE FILTER

It could be necessary to clean the filter when:


- The appliance does not fill with water.

- The appliance fills with the water for a long time.


Warning! Disconnect the mains plug from the mains socket.

To clean the filter:

1. Close the water tap.
2. Remove the inlet hose behind the appliance.
3. Clean the filter in the valve with a stiff brush or a towel.

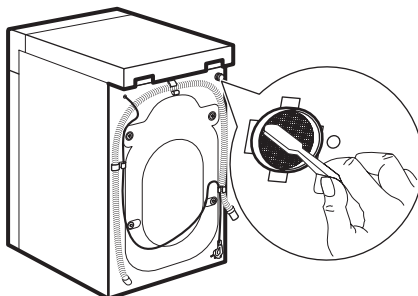

4. Install again the inlet hose. Make sure that the couplings are tight to prevent leakages.

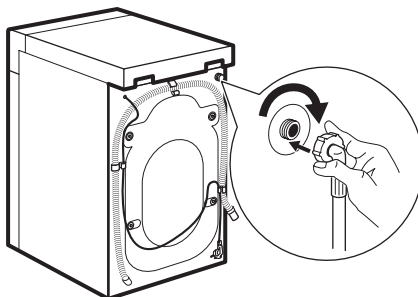

5. Open the water tap.

EMERGENCY DRAIN

Because of a malfunction, the appliance cannot drain the water.

If this occurs, do steps (1) through (5) of 'To clean the drain pump'.

If necessary, clean the pump.

When you drain the water with the emergency drain procedure, you must activate again the drain system:

1. Put 2 litres of water in the main wash compartment of the detergent dispenser.

2. Start the programme to drain the water.

FROST PRECAUTIONS

If the appliance is installed in an area where the temperature can be less than 0 °C, remove the remaining water from the inlet hose and the drain pump.

1. Disconnect the mains plug from the mains socket.
2. Close the water tap.
3. Remove the water inlet hose
4. Put the two ends of the inlet hose in a container and let the water flow out of the hose.

5. Empty the drain pump. Refer to the emergency drain procedure
6. When the drain pump is empty, install the inlet hose again.



Warning! Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures.

TROUBLESHOOTING

The start of the appliance does not occur or it stops during operation.

First try to find a solution to the problem (refer to the table). If not, contact the service centre.

With some problems, the display shows an alarm code:

- **E:00** - The appliance door is open or not closed correctly or it does not fill with water.

- **E:01** - The appliance continuously fills and drains the water or it does not drain or do the spinning phase.
- **E:02** - Technical malfunction, contact the service centre.
- **E:03** - Technical malfunction, contact the service centre.



Warning! Deactivate the appliance before you do the checks.

Problem	Possible cause	Possible solution
The appliance does not start.	The mains plug is not connected in the mains socket.	Put in the mains plug.
	The fuse in the box fuse is damaged.	Replace the fuse.
	The appliance door is open.	Close the door firmly.
	You do not press the start button	Press the start button.
	The programme knob is not in the correct position.	Turn the programme knob in the correct position.
The appliance does not fill with water.	The delay start is set. It is available only for models with the Delay start.	To start immediately the programme, cancel the delay start.
	The water tap is closed.	Open the water tap.
	The water inlet hose is damaged.	Make sure that the water inlet hose has no damages.
	The filter in the water inlet hose is blocked .	Clean the filter. Refer to 'Care and cleaning'.
	The water tap is blocked or there is limescale on it.	Clean the water tap.

Problem	Possible cause	Possible solution
	The connection of the water inlet hose is not correct.	Make sure that the connection is correct.
	The water pressure is too low.	Contact your local water authority.
The appliance does not drain the water.	The water drain hose is damaged.	Make sure that the water drain hose has no damages.
	The filter of the drain pump is blocked.	Clean the filter of the drain pump. Refer to 'Care and cleaning'.
	The connection of the water drain hose is not correct.	Make sure that the connection is correct.
	A washing programme without the drain phase is set.	Set the drain programme.
	The function Rinse Hold is on.	Set the drain programme.
The spin phase does not operate.	The spin phase is off.	Set the spin programme.
	The filter of the drain pump is blocked.	Clean the filter of the drain pump. Refer to 'Care and cleaning'.
	Balance problems with the laundry load.	Adjust manually the items in the tub and start the spin phase again.
There is water on the floor.	Leakages from the couplings of the water hoses.	Make sure that the couplings are tight.
	Leakages from the drain pump.	Make sure that the drain pump filter is tight.
	The water drain hose is damaged.	Make sure that the water inlet hose has no damages.
You cannot open the appliance door.	The washing programme is in operation.	Let the washing programme end.
	There is water in the drum.	Set the drain or the spin programme.
The appliance makes an unusual noise.	Incorrect level of the appliance.	Adjust the level of the appliance. Refer to 'Installation'.
	You did not remove the packaging and/or the transit bolts.	Remove the packaging and/or the transit bolts. Refer to 'Installation'.
	The load is very small.	Add more laundry in the drum.
The appliance fills with water and drain immediately.	The end of the drain hose is too low.	Make sure that the drain hose is in the correct position. Refer to 'Installation'.
The washing results are not satisfactory.	The detergent you used was not sufficient or correct.	Increase the detergent quantity or use a different one.
	You did not remove the stubborn stains before you wash the laundry.	Use special products to remove the stubborn stains.
	Incorrect temperature was set.	Make sure that you set the correct temperature.
	Too much laundry load.	Decrease the laundry load.

After the check, activate the appliance. The programme continues from the point of interruption.

If the problem occurs again, contact the service centre.

SERVICE

Refer to the information supplied with this appliance for guarantee condition and point of contact. The information to give to the service is on the rating plate.

We recommend that you write the information here:


Model	
Product number	914.....
Serial number (S.N.)	

INSTALLATION


UNPACKING

1. Use the gloves. With a cutter remove the external film.


i Do not to discard the plastic cover (A).

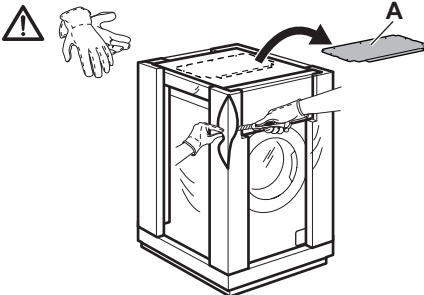


2. Remove the polystyrene packaging materials.

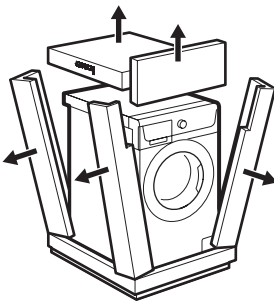


3. Remove the internal film.

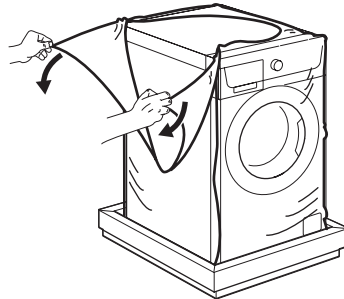


4. Open the door and remove all the items from the drum.

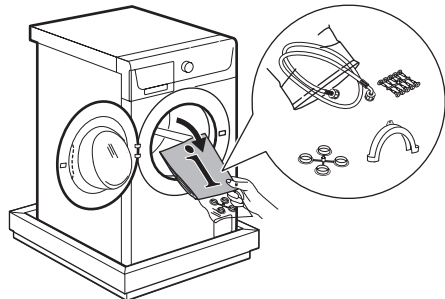


5. Put the front piece on the floor behind the appliance. Carefully put down the appliance with the rear side on it. Make sure not to damage the hoses.

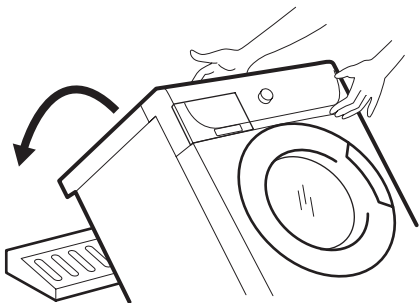

6. Remove the polystyrene protection from the bottom.

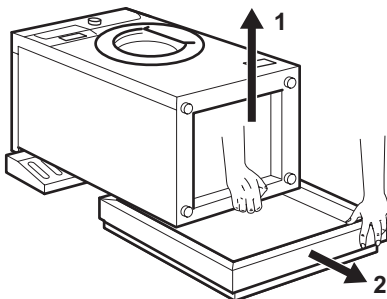


7. Install the plastic cover (A), removed from the top of the packaging, to the bottom of the appliance. Remove the adhesive strip and close the bottom of the appliance. Attach permanently the plastic cover to the bottom of the appliance with the small plastic caps that you can find in the user manual bag.

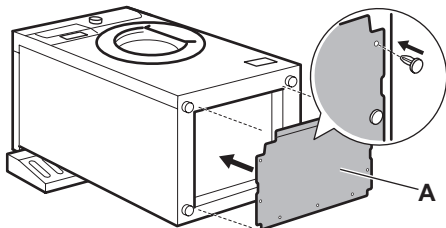


8. Pull up the appliance in vertical position.

9. Remove the four bolts with a key. Pull out the plastic spacers. Remove the power supply cable and the drain hose from the hose holders.

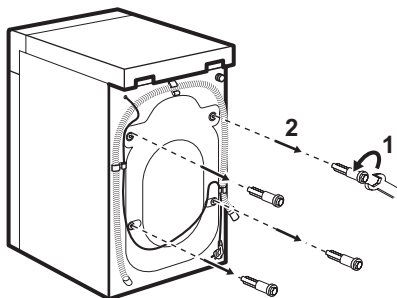

10. Put the plastic caps in the holes. You can find these caps in the user manual bag.

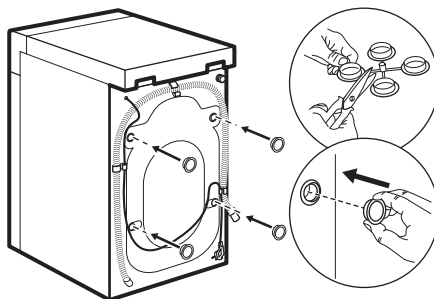


Warning! Remove all the packaging and the transit bolts before you install the appliance.


i We recommend that you keep the packaging and the transit bolts for when you move the appliance.

POSITIONING AND LEVELLING

- Install the appliance on a flat hard floor.
- Make sure that carpets do not stop the air circulation below the appliance.
- Make sure that the appliance does not touch the wall or other units
- Loosen or tighten the feet to adjust the level. A correct adjustment of the appliance level prevents the vibration, noise and the movement of the appliance when in operation.

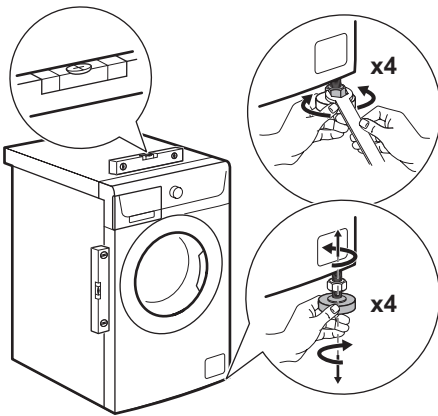


- The appliance must be level and stable.

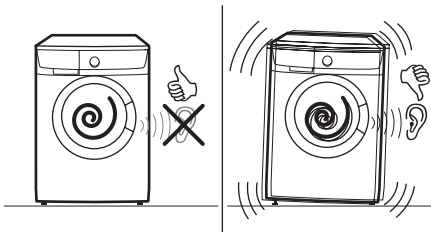

- Caution!** Do not put cardboard, wood or equivalent materials below the appliance feet to adjust the level.

THE INLET HOSE

- Connect the hose to the appliance. Loose the ring nut to set it in the correct position.

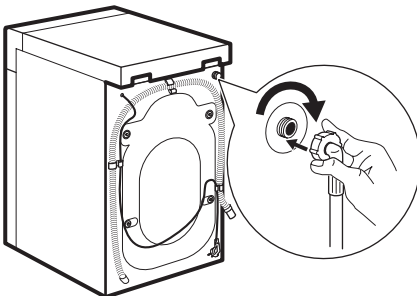

- Connect the water inlet hose to the cold water tap with 3/4 thread.




- Caution!** Make sure that there are no leaks from the couplings.
- i** Do not use an extension hose if the inlet hose is too short. Contact the service centre for the replacement of the inlet hose.


WATER DRAINAGE

There are different procedures to connect the drain hose:


With the plastic hose guide.

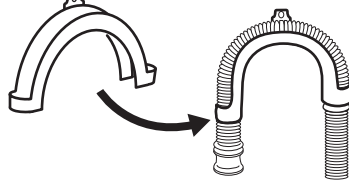


- On the edge of a sink. Make sure that the plastic guide cannot move when the appliance drains. Attach the guide to the water tap or the wall.

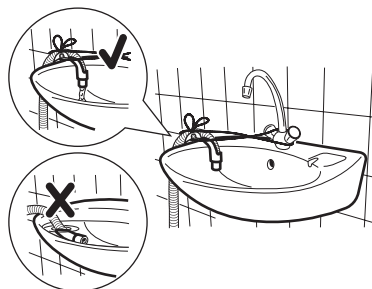

- To a stand pipe with vent-hole. Refer to the illustration. Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inner diameter of the drain-pipe must be larger than the external diameter of the drain hose.

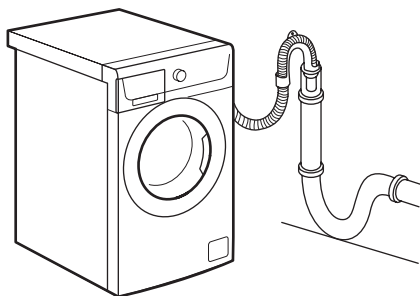

- Directly to a built-in drain pipe in the room wall and tighten it with a clip.

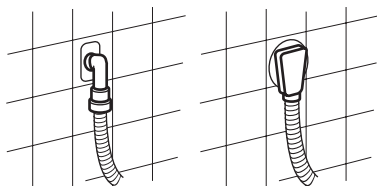

Without the plastic hose guide.

- To a sink spigot.
Refer to the illustration. Put the drain hose in the spigot and tighten it with a clip. Make sure that the drain hose makes a loop to prevent that remaining particles go in the appliance from the sink.

